



- EN Clean with a moist cloth. If necessary, use a little dish soap on the cloth.
- DK Rengør med en fugtig klud. Hvis nødvendigt, brug en smule opvaskemiddel på kluden.
- DE Mit einem feuchten Tuch reinigen. Erforderlichenfalls einige Tropfen Geschirrspülmittel auf das Tuch geben.
- FR Nettoyez avec un tissu humide. Si nécessaire, utilisez un peu de liquide vaisselle sur le tissu.
- ES Limpie con un paño húmedo. Si es necesario, utilice un poco de detergente para platos en el paño.



EASE PORTABLE LAMP — ASSEMBLY

— Johan van Hengel

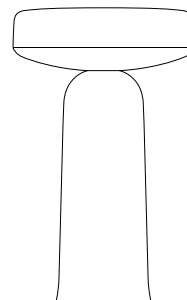

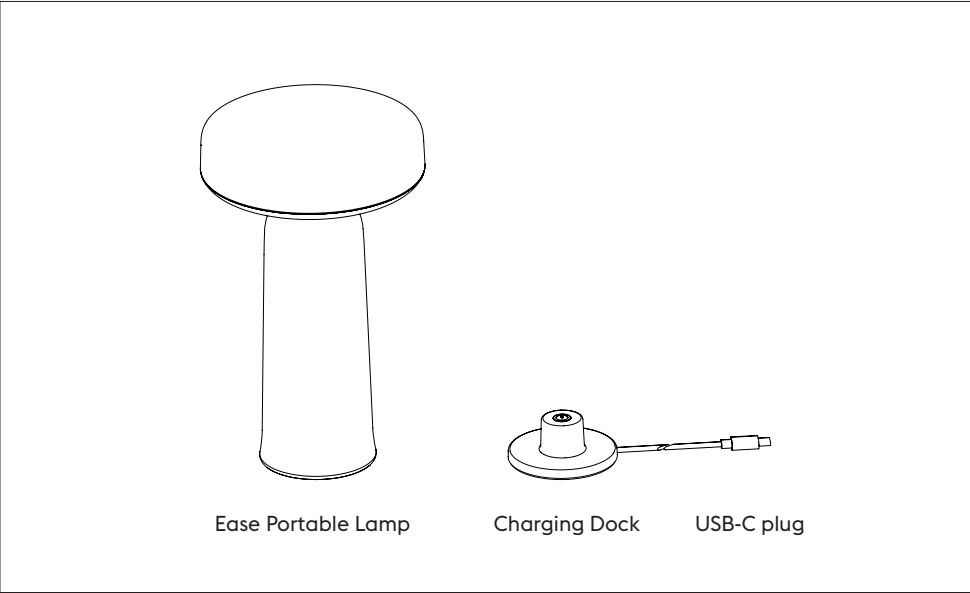

ASSEMBLY GUIDE – SAMLEVEJLEDNING – MONTAGELEITFADEN
GUIDE DE MONTAGE – GUÍA DE MONTAJE

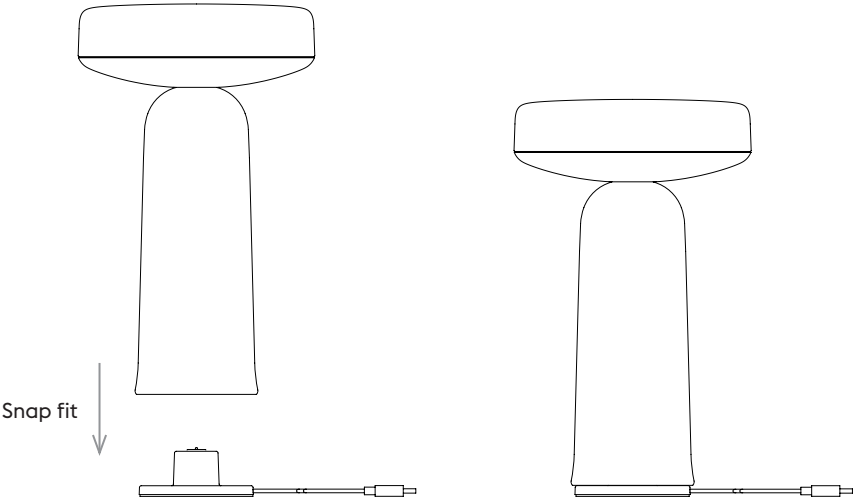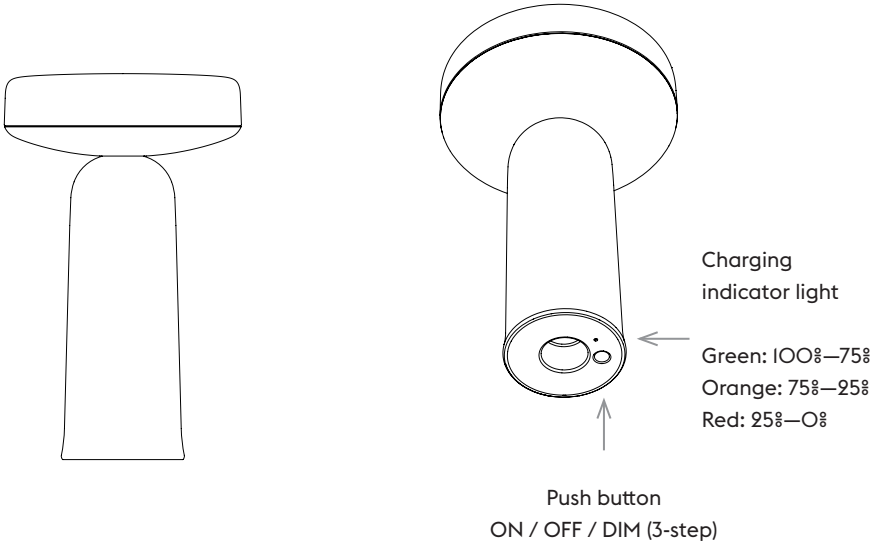

EASE PORTABLE LAMP
OUTPUT: DC 3.6V, 4W NON-REPLACEABLE LED
CHARGING: DC 5V, 1.5 A

